

Hood Bracket Install Instructions

Estimated install time- 30 minutes +or- for wiring Difficulty level: Easy

Patent Pending


1) With the hood latches still on, loosen (do not remove) The two bolts connected to the hood hinge with a 13mm wrench as shown. (You may need to use a screwdriver or razor to break the washers free from the paint.)



2) Install necessary light mounting hardware onto the bracket prior to install. Also check to be sure that you have clearance between the hood and the hardware by setting the bracket into position and holding it level. Trim any extra length off of the installation mount bolts so they do not hit the cowl. Finished mount height should allow a minimum of 1/4"

between the cowl and nearest interference to allow for flex during vigorous off-roading.



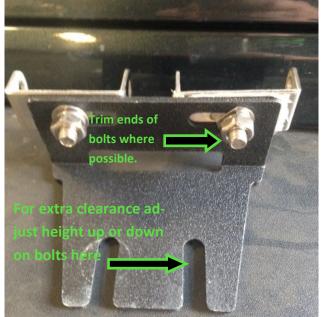

3) Place the mount in between the washers and the hinge itself as shown, tighten the bolts by inserting the wrench through the gap in the bracket. (Bracket should face towards the windshield)



4) Repeat steps 1-3 on the opposite side of the Jeep

5) Install lights onto the premounted brackets.

Note: Wiring can easily be run behind the hood into the engine compartment for a clean professional look.

Important: At this point whatever light mounts that you chose should already be installed

