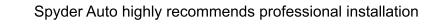# SPYDER™

QUICK GUIDE

PLEASE DO NOT RETURN THE PRODUCT TO THE STORE

Please contact Spyder Auto directly if you have any questions or concerns regarding our products

Please contact Spyder Auto at (833) 513-1350

email : techsupport@spyderauto.com

Spyder Auto
19395 E. Walnut Dr. North
City of Industry, CA 91748

Office Hours
Mon-Fri 8:00AM-5:30PM PST
www.spyderauto.com

---

2 — SUGGESTED INSTALLATION TOOLS
(Please use safe pre-cautions)

Spyder Auto highly recommends professional installation

- Safety Goggles
- Safety Gloves
- Soft Towel (lay out over work area)
- Storage Tray / Box (prevent missing parts)
- Wire Crimper
- Soldering Iron
- 12v Test Light / Volt Meter
- Electrical Tape
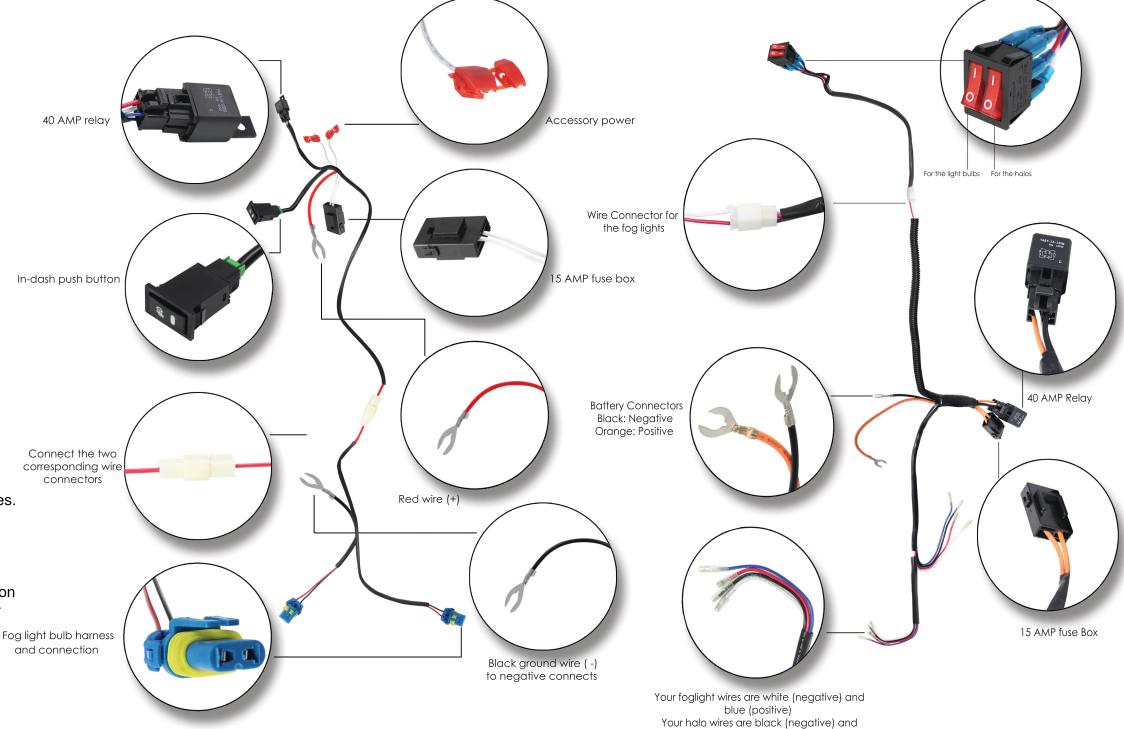- Screwdriver
- Socket Wrench
- Panel Popper

Installation Tips:
- Always wear eye protection and safety gloves to avoid any possible injuries.
- DO NOT cut or connect any wires without identifying them to avoid any possible electrical shortage.
- Spyder Auto recommends soldering each wire connection for optimal connectivity
- Please check to ensure no electrical connection is exposed after installation
- To prevent damage to the product or vehicle, please use electrical tape or zip ties to organize loose wires.

Note: Installation may vary depending on vehicle.
Removal of your vehicle's front bumper may be required.

Warning: Please use the recommended safety equipment when installing Spyder Auto Headlights. Spyder Auto is not liable for any injuries or accidents that may occur during installation.

---

3 — IN - DASH PUSH BUTTON

- 40 AMP relay
- In-dash push button
- Connect the two corresponding wire connectors
- Fog light bulb harness and connection
- Accessory power
- 15 AMP fuse box
- Red wire (+)
- Black ground wire (-) to negative connects

---

4 — DUAL SWITCH HALO FOGLIGHTS HARNESS

- For the light bulbs
- For the halos
- Wire Connector for the fog lights
- 15 AMP fuse box
- Battery Connectors Black: Negative Orange: Positive
- 40 AMP Relay
- 15 AMP fuse Box

Your foglight wires are white (negative) and blue (positive)
Your halo wires are black (negative) and red (positive)

---

5 — UNIVERSAL PUSH SWITCH FOGLIGHTS HARNESS

- Universal Push Button Switch
- 40 AMP Relay
- Wire Connectors
- 15 AMP fuse Box
- Fog light bulb harness and connection
- Battery Connectors Black: Negative Red: Positive Connect to power

---

6 — INSTALLATIONS

Red (+) is positive and black (-) is ground. These are the wires that connect to your battery terminal.

Connect the relay, Wait for a click to be heard , this insures a correct instalation.

This is the fuse for the fog lights make sure it is in good working order

---

7 — INSTALLATIONS

Connect these two wire connectors to complete your installation and activate your push switch
Note: all switches are different.

Accessory wire to be hooked up to an accessory component

Plug the corresponding attachments into each light bulb to complete installation.
Note: each light bulb type will have a different connector type

---

8 — PRODUCT REGISTRATION

To learn more about Spyder Auto's warranty information and terms and conditions, please visit :

www.spyderauto.com/terms

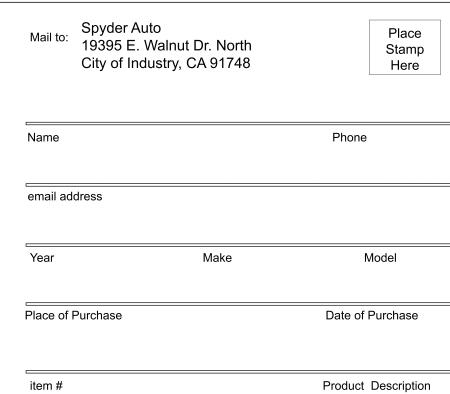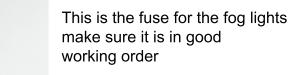Follow Spyder Auto's Social Media

facebook.com/SpyderAuto   Instagram.com/SpyderAuto   twitter.com/SpyderAuto

Register your product on line at www.spyderauto.com/registration
or by mail : Product Registration Card

Mail to:
Spyder Auto
19395 E. Walnut Dr. North
City of Industry, CA 91748

Place Stamp Here

Name _____ Phone _____

email address _____

Year _____ Make _____ Model _____

Place of Purchase _____ Date of Purchase _____

item # _____ Product Description _____